



<https://www.cpelectronics.co.uk/>





IS500



220-240V~ 50/60Hz




IS2099

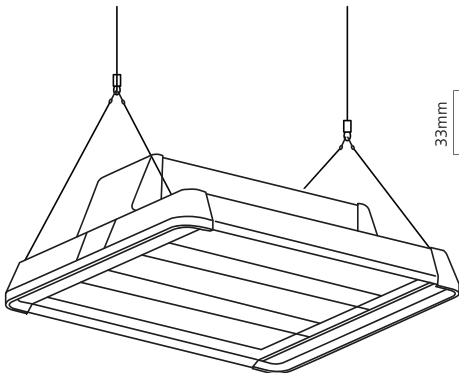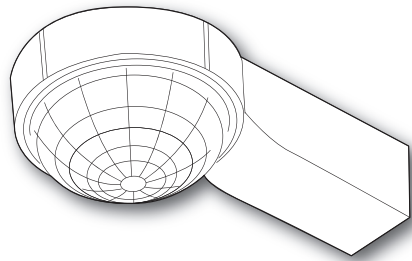

Industrial

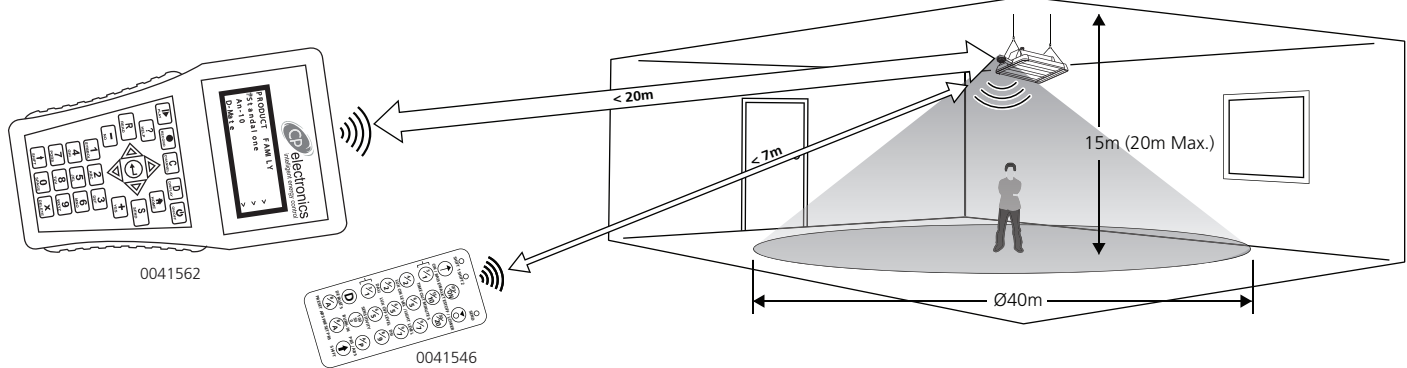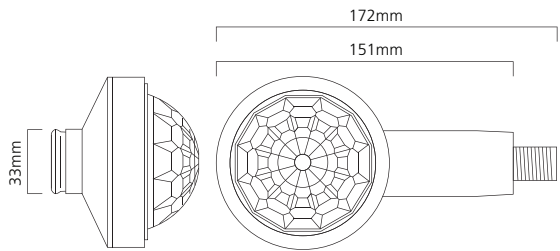


Walk Across

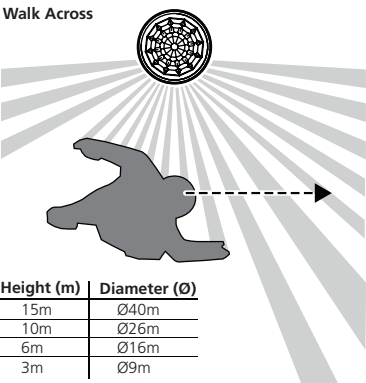


Height (m)	Diameter (Ø)
15m	Ø40m
10m	Ø26m
6m	Ø16m
3m	Ø9m

Walk Towards

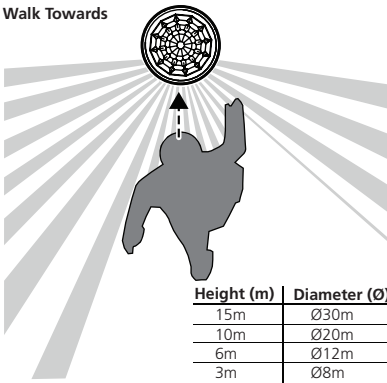


Height (m)	Diameter (Ø)
15m	Ø30m
10m	Ø20m
6m	Ø12m
3m	Ø8m

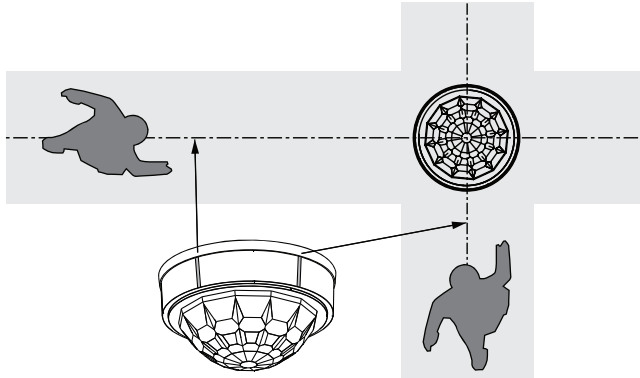

1




1a ?

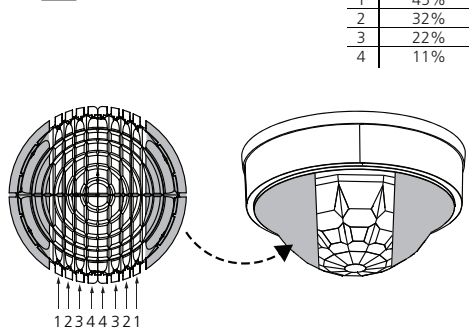


No.	% Coverage
1	45%
2	32%
3	22%
4	11%

1b ?

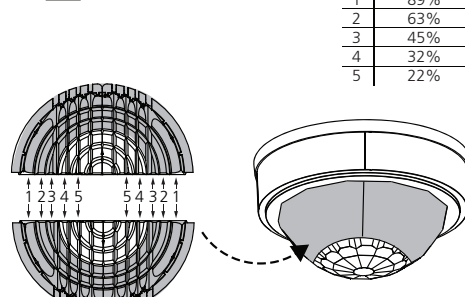

No.	% Coverage
1	89%
2	63%
3	45%
4	32%
5	22%

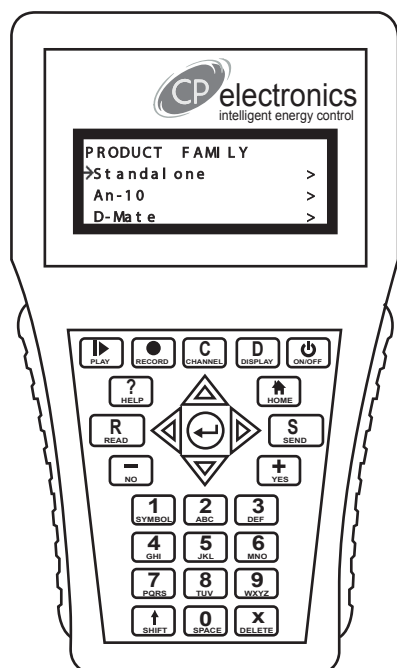

0041562

Symbol	Text	Action on Press	Long press	Shift +
	Play	Displays a full list of the items in the currently loaded macro. Press the Play button again to start sending the parameters.	None.	Brings up a list of saved macros that can be recalled for the selected product range.
	Record	Selects an item so it is a member of the current macro. Delete the item from the macro by using delete in the review screen.	None.	Prompts the user to select between saving the current macro or to start recording a new macro (by clearing all selected parameters).
C	Channel	Asks the user to enter a channel number to switch to. This only takes effect on devices that have more than one channel. The Channel button works differently in Rapid and An-10 products which consist of several identical channels. Start at channel 0 per product (except for Rapid LCM, Interface and Light Switch which default to channel 1), and press C to change channel. Select a channel either by Up/Down or by number. Press Enter or Right to select the channel. All channels is at the top of the list (0 on keypad). Current channel number is displayed top right in the menu and is the selected item in the channel menu.	None.	
D	Display	Increased backlight for 5 steps, then back to 0.	None.	To step down backlighting levels.
	On/Off	None.	Turns the device on/off.	
?	Help	Displays the help screen/further explanation for the selected item. Press help again to cancel.	None.	Shows software version number.
	Home	Goes back to the root menu for the currently selected product range.	Goes back to the main root menu.	
R	Read	Reads back the currently selected parameter.	Reads back all the selected parameters in the active menu only.	
S	Send	Sends the currently selected parameter.	Lux Up / Down : will raise or lower light level.	Shift + long press sends all the parameters in the active menu only (similar to macro Play but only applies to the current menu). This is the default. See page 4 for changing this.
		Selects the submenu.	None.	
		To go back along the path you came (typically up one level).	None.	
		Scroll Up/Down through the current menu or help text.	None.	Use to scroll a page Up/Down of help text.
		Selects the submenu. Also used for confirming handset configuration changes.	None.	
-	No	Selects No, or decrements the selected parameter, or is used to remove a value from a list.	Quickly/continuously decrements the selected parameter.	
+	Yes	Selects Yes, or increments the selected parameter, or is used to add a value to a list.	Quickly/continuously increments the selected parameter.	
1	Symbol	Number 1, or cycles through a list of symbols.	None.	
2-9	A-Z	Numbers 2 to 9, or cycles through the list of corresponding letters.	None.	
	Shift	Changes between uppercase and lowercase.	Toggles caps lock on/off.	
0	Space	Number 0, or the space character.	None.	
X	Delete	Deletes a single character, or item.	Deletes all characters, or all items.	