


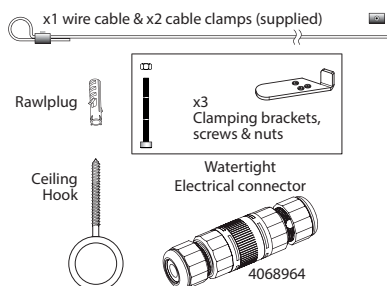
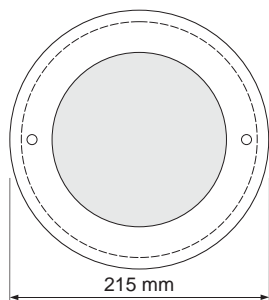
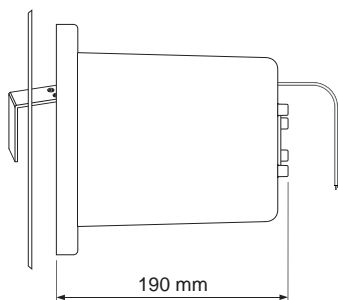





4069958 - X = 2.7m
4069959 - X = 1.2m
4069965 - X = 2.2m




1 Prepare hole in ceiling

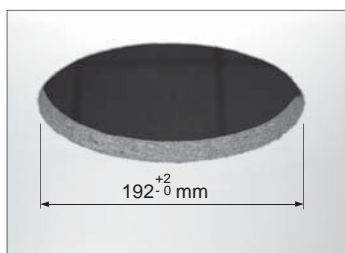


2 Remove Cover

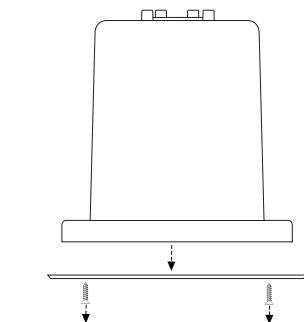


5 Move stop brackets into position

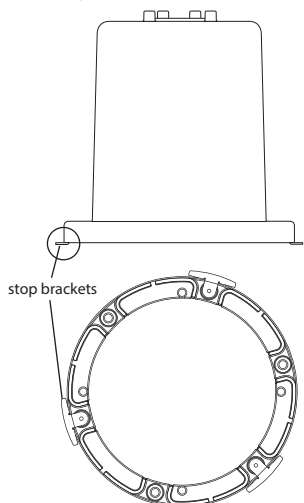


3 Add Ceiling hook and wire cable support

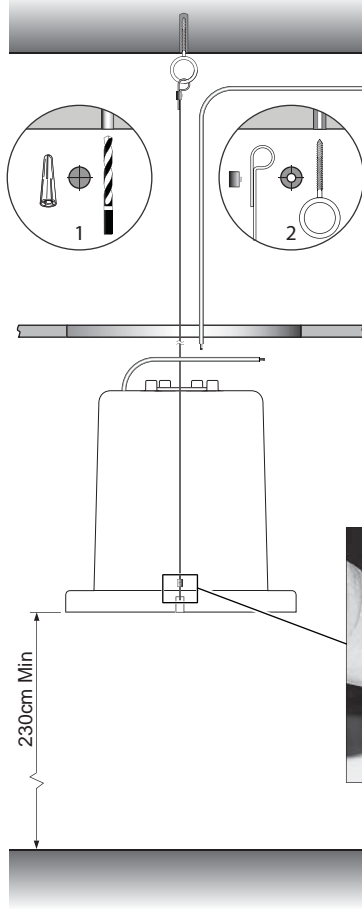


4 Make electrical connection using electrical connector 4068964

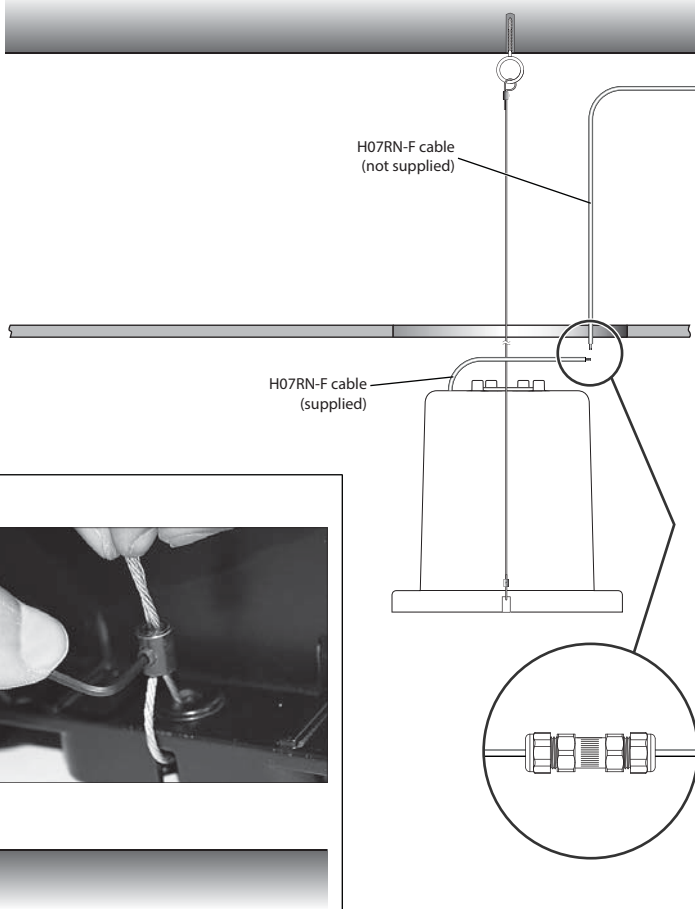





6 Assemble x 3 brackets for false ceiling thickness 5 to 30 mm (or 30 to 50 mm)

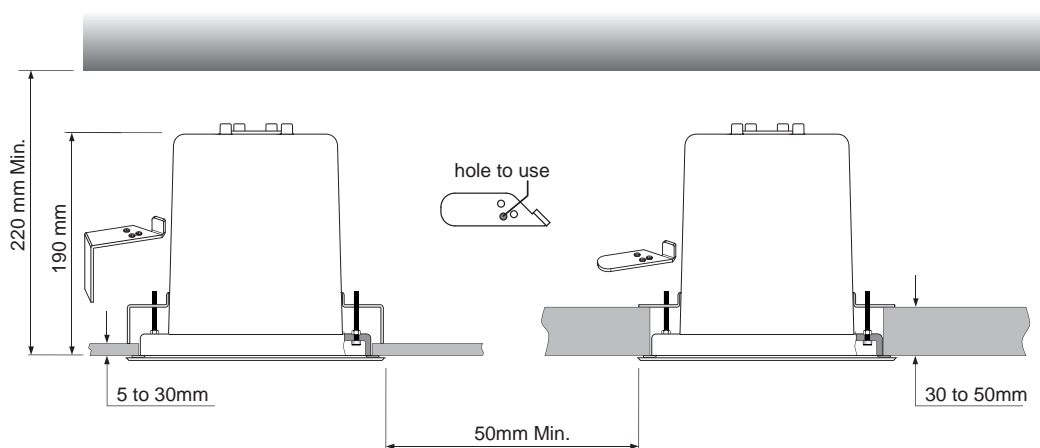



7 Insert fixture into ceiling with brackets turned in 'open' position

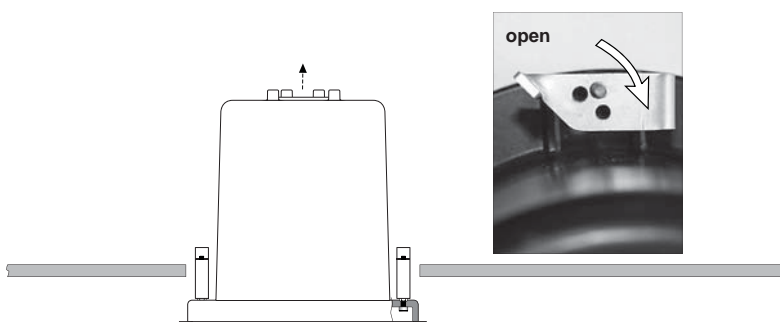

8 Fix fixture into ceiling with brackets turned in 'closed' position and secure

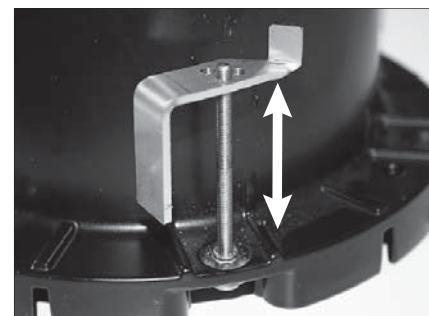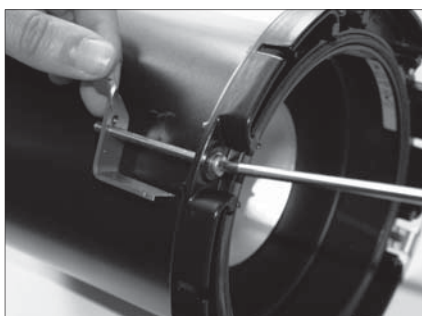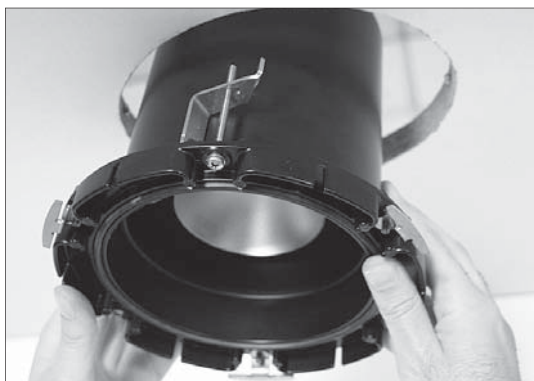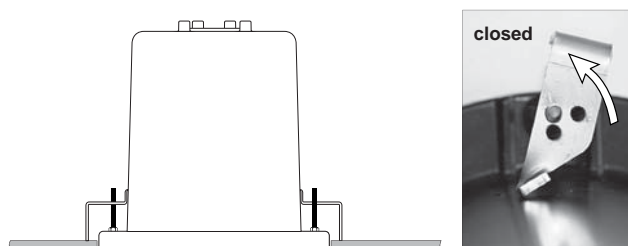

9 Replace cover using x 2 screws and finish

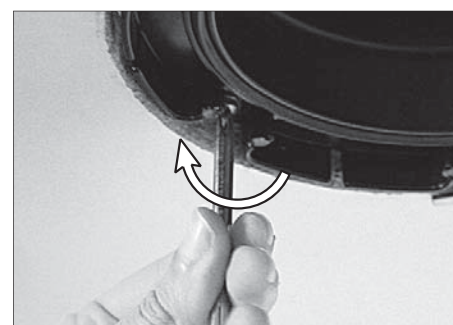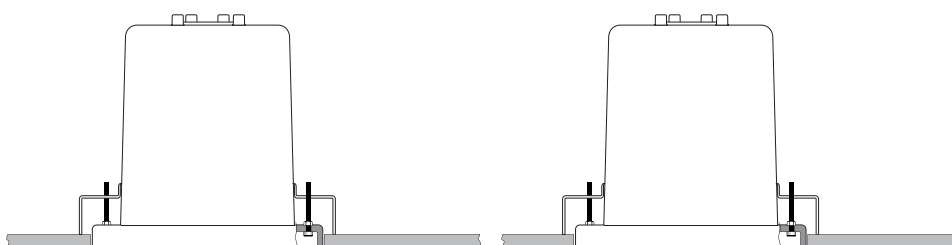

MI/1772 - 4^a ed

Concord
by **SYLVANIA**

Feilo Sylvania Europe Limited
Avis Way, Newhaven East Sussex BN9 0ED UK
www.sylvania-lighting.com

© Feilo Sylvania Europe Limited 05.18