

Microwave detectors ceiling-mounted and tilt adjustable

Zone 2: Rest of Europe except UK, France, Portugal, Germany, Switzerland, Austria, Slovak Republic, Ireland

FEATURES

Switching detectors



- Occupancy detection and switching with lux level sensing Time delay function (10 second 99 minutes) Dual sensitivity: independently configurable ON and OFF motion sensitivityPresence or absence detection functionality
- Programmable via remote handsets: 0041546 or 0041562
- User handset available to control
- Accessory enables surface mounting
 The wall mounting bracket enables the adjustable microwave sensor,
 installed within a surface mounting back box, to be attached at a lower
 height than the ceiling, for example in a position below the level of direct/ indirect luminaires
- Switching versions may be connected in parallel for larger areas, e.g. 'L shaped corridors'









0041579* 0041580* 0041581*

- Dimming detectors

 DSI, DALI or 1-10V dimming versions
 Two channel flexibility: one switched, one dimming on DALI version
- Step-down illumination
- Scene setting and recall
- Lamp burn-in
- Control capacity: digital detectors up to 20 DALI dimming ballasts (10 if channel 1 relay used), analogue detectors up to 10 dimming ballasts
- Can also control heating and ventilation loads

Dimensions (mm)





ORDER	DESCRIPTION	LOAD BATIN	G AT 230VAC
ODE	DESCRIPTION	R/I/F & CF	TIME DELA
Occupancy l	inked detectors with lux level sensing		
0041579*	Adjustable head microwave presence/absence detector with lux level sensing, infrared override and time delay function	10A	10 sec to 99 m
0041556	Ceiling-mounted microwave detector switched		
Occupancy-l	inked detectors with lux level sensing and dimming		
0041580*	Adjustable head microwave presence/absence detector with dimming and time delay function. DALI dimming output.	10A	10 sec to 99 mi
0041581*	Adjustable head microwave presence/absence detector for 1–10V analogue dimming output	10A	15 sec to 30 m
0041557	Ceiling-mounted microwave detector Direct Dim, DALI / DSI		

ACCESSORIES	DESCRIPTION				
0041546	Handheld programming device				
0041591	Surface mounting back box for microwave sensors				
0051562 Programming handset for lux level sensing and dimming detectors					
0041593	Surface mounting back box extender ring for microwave sensors				
0041638	User handset override on/off; lux up/lux down (lux level sensing & dimming models)				
0041592	Wall mounting bracket				
R = Resistive; I =	Incandescent; Fluorescent; CF = Compact Fluorescent				





0041593




0041591


0051562


0041638




Detection pattern








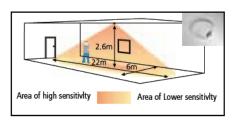

Features

Front features Mounting Bezel Sensor Lens which covers... Microwave Sensor IR Receiver Light Level Sensor Status LEDs

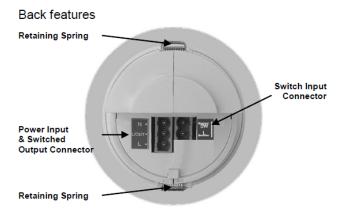

Microwave Sensor

Detects movement within the unit's detection range, allowing load control in response to changes in occupancy.

IR Receiver

Receives control and programming commands from an IR (infrared) handset.

Light Level Sensor

Measures the overall light level in the detection area

Status LEDs

The LED flashes Red to indicate the following:

Walk Test LED active	when movement is detected
Valid setting received	- 100-

Power Input & Switched Output Connector

Used to connect mains power to the unit and to connect a switched load.

Switch Input Connector

Two input terminals can be used to manually override the lights on or off.

Sensor functionality

Detection Mode


The Detection Mode can be set to behave in Presence or Absence mode:

- Presence When movement is detected the load will automatically turn on. When the area is no longer occupied the
 load will automatically switch off after an adjustable time period.
- Absence The load is manually switched on. When the area is no longer occupied the load will automatically switch
 off after the adjustable time period has elapsed.

In either case, sensitivity to movement of the microwave sensor can be adjusted using the Sensitivity parameter. HINT: To assist in setting the Sensitivity, turn on the Walk Test LED which will flash red when movement is detected.


Switch Level On/Off

Occupancy detection can be made dependant on the ambient light level using the Lux On Level and Lux Off Level parameters.

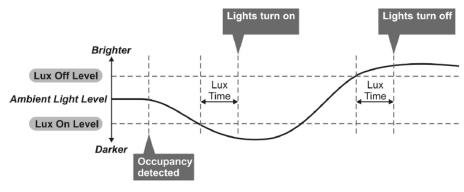





Detection diagrams

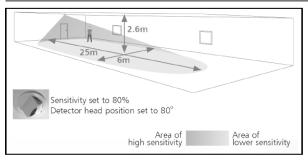

Ideal for large office or classroom

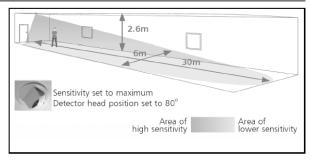

Ideal for corridor or aisle applications

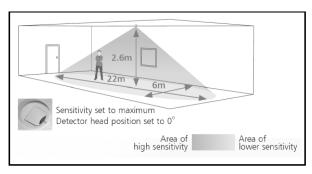

Note. If the range is compromised by the ceiling construction / material. Add the supplied 20mm spacer ring. See page 4 for fitting details.


Ideal for open plan areas and offices

Installation

Choosing a Suitable Location

The detector should be sited so that the occupants of the room fall inside the detection pattern shown opposite).

- Avoid positioning the unit where direct sunlight may enter the sensor element.
- Do not site the sensor within 1m of any lighting, forced air heating or ventilation.
- Do not fix the sensor to an unstable or vibrating surface.
- Avoid metallic objects directly in front of the sensor head.

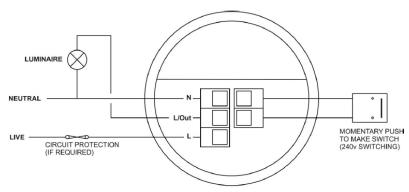

Absence detection

- To use absence detection a retractive (momentary) switch must be connected between the 2 terminals on the diagram. Note that this will be switching mains voltage.
- The unit ships with presence detection as default. To change to absence detection, press and release the external switch 5 times within the first minute of power up. The LED will turn on solid for 30 seconds to indicate absence mode has been selected.
- To change back to presence detection, repeat the above procedure—the LED will flash for 30 seconds to indicate
 presence mode has been selected.

Note: the above adjustments can also be made using the UHS5 or UNLCDHS handsets. See Programming sections.



Power-up test procedure

When power is applied to the unit, the load will turn on immediately.

Set the timeout to 10 seconds, vacate the room or remain very still and wait for the load to switch off .

Check that the load switches on when movement is detected.

The unit is now ready for programming.

Read back function - Professional programming handset only (0041562)

The **0041562** has the ability to read back the settings stored in a device.

To read back individual parameters

Navigate to the parameter and press the 'R' (Read) button whilst pointing at the device. The handset will click
when the parameter has been read back, the device will flash its LED, and the value will be shown against the
parameter in the menu.

To read back all of the parameters in a menu

- Press and hold the 'R' (Read) button for more than 1 second.
- The handset will click every time a parameter is received
- The device will show multiple flashes of its LED
- All of the values will be shown against the parameters in the menu.
- The individual parameters may be edited and then saved as a 'Macro'.

Notes

- If a parameter(s) has been missed because of a communication error, the missing value(s) is replaced by dashes.
- When reading back, the Channel 1 relay (where fitted) will temporarily be switched off, and will return to it's normal state 2 seconds after the read back has been completed.


Installation

The **0041579** is designed to be mounted using either:


- Flush fixing, or
- Surface fixing, using the optional Surface Mounting Box (part no. **0041591**). Both methods are illustrated below.

Warning - be careful bending springs when mounting unit.


Flush fixing

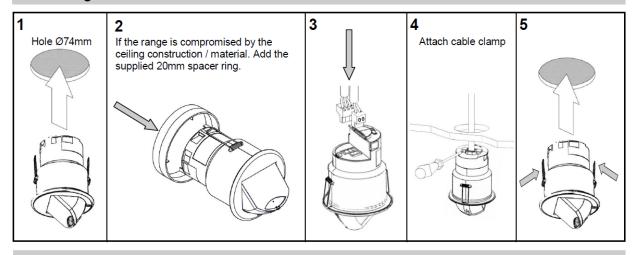


Surface fixing

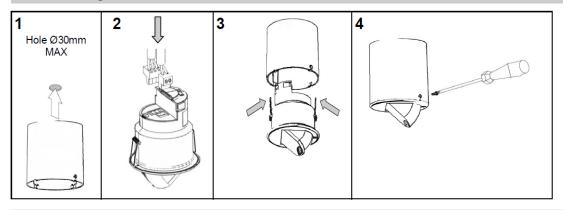

Head locking

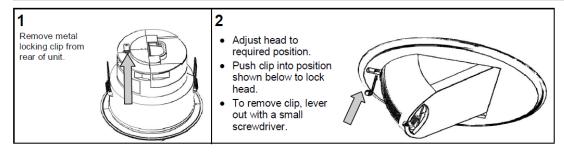

Wire stripping details





Important

Ensure that the cables are formed as shown before affixing the cable clamp. The clamp MUST clamp the outer sheath(s) only.

Bend cores as shown.

Fault finding

What if the load does not turn ON?

Strap across the L and LIVE OUT terminal to turn the load on

Number of Shift key presses

If the supply and wiring are good, check the LUX level setting. Increase the LUX level setting to allow the
controller to turn on at higher ambient natural light level.

What if the load does not turn OFF?

- Ensure that the area is left unoccupied for a greater time period than the time out period set using the switch.
- Make sure that the sensor is not adjacent to vibrating surfaces or objects (e.g. ventilation equipment).
- The unit may pick up movement through thin partitions or ceilings. Reduce the sensitivity.

Programming



The functionality of the **0041579** is controlled by a number of parameters which can be changed or programmed by any of the following devices:

- Basic Programmer handset 0041546 See instructions below
- Professional Programmer handset 0041562 See user guide for full programming details. For most basic programming operations the UHS5 handset can be used and the following procedures are based on using this device.

Point the handset at the Sensor and send the required programming commands to the unit as shown below.

Valid commands will be indicated by a red LED flash. See page 1 for details of other LED responses.

Note: other functions on the 0041546 which are not shown below are not applicable to this product.

		SHIFT							
Parameter Name	Default Value	0 SHIFT 1	O SHIFT 2	1 -Ö- shiFt 1	O SHIFT 2	2 O OF SHIFT 1 SHIFT 2	3 SHIFT 1 SHIFT 2	UHS5 Handset Graphics	Description
				Butto	on A	ctivation			
On / Raise		On						ON/RAISE	Turn lights on.
Off / Lower		Off						OFF/LOWER	Turn lights off.
Walk test	Off	On		Off				OFF ON WALKTEST	When set to On this causes a red LED to flash on the sensor when it detects movement. Use this feature to check for adequate sensitivity levels.
Time Out (Time adjustment)	10 mins	1, 10 20 minu		5, 15 30 minu				5/1 15/10 3%20 TIME OUT MINUTES	Once the detector is turned on, this value sets how long the lights will stay on once movement has ceased.
Lux on level (Switch level on)	9	2, 5	& 7	4, 6 8	& 9			42 % 9/7 LUX ON LEVEL // 1977	Lux level setting to prevent the luminaires being switched on if the ambient light level is sufficient (adjustable between 1 and 9). The luminaires will always be switched on at level 9.
Lux off level (Switch level off)	9	2, 5	& 7	4, 6 8	\$ 9			OALI LUX OFF LEVEL DEL	Lux level setting to switch the luminaires off during occupancy if the ambient light level goes above the setting (adjustable between 1 and 9). Level 9 will always keep the lights on. This setting can be used for "window row switching".
Sensitivity	9	1, 5	& 9	3, 6 8	\$ 8			₹1 %5 %9	Sensitivity level for detecting movement. 1 = low sensitivity 9 = high sensitivity
Defaults						D		D	Returns the unit to the default settings.
Shift								1	Use this button to select the settings in red and blue signified by the 'Shift 1' and 'Shift

2' LEDs



Advanced programming

Parameter Name	Default Value	Range / Options	Description	0041546	0041562
Detector Paramete	ers				
Walk Test LED	Off	On or Off	When set to On this causes a red LED to flash on the sensor when it detects movement. Use this feature to check for adequate sensitivity levels.	✓	✓
Time Out (Time adjustment)	20 minutes	0-99 minutes	Once the detector is turned on, this value sets how long the lights will stay on once movement has ceased. Select 0 for 10 second delay – use for commissioning only.	✓	✓
Manual Time Out	10 minutes	0-99 minutes	When a manual operation occurs, either via the switch input or the infrared, it invokes the timeout period. Example 1: a detector in presence mode has a detector timeout of 15 minutes and a manual timeout of 3 minutes. When the user leaves the room they press the off button. The sensor will revert to automatic after 3 minutes, and then walking back in the room will turn the lights on. Example 2: using the settings above, the user turns the lights off (say for a presentation) but stays in the room. Every time a movement is detected, the manual timeout period is re-triggered, but when it doesn't pick up for the short timeout period, the sensor will timeout and revert to automatic. This means the lights may turn on inadvertently during the presentation, if the occupants are still for the manual timeout period, so adjust the timing carefully.	×	√
Sensitivity On	9	1 (min) to 9 (max)	Sensitivity level for detecting movement when the detector is already on. 0041546 sets Sensitivity On and Off to the same value.	√*	✓
Sensitivity Off	9	1 (min) to 9 (max)	Sensitivity level for detecting movement when the detector is off. *0041546 sets Sensitivity On and Off to the same value.	√ *	✓
Lux time	0	0 (disabled) 1-99 minutes	If the detector measures the lux level and decides that the output needs switching on or off as a consequence, the lux time must elapse first. If at any time during the timed delay the lux change reverses then the process is cancelled. Lux Time enables absence detection to be implemented with a lux off level set. When the button is pressed, the lights will go on, regardless of ambient light level. However, if there is sufficient ambient light, they will turn off again after the Lux Time. Note that whenever the an external switch is pressed, whether in absence or presence mode, if the lights were out because of the lux level, they will be immediately turned on again for at least the Lux Time.	×	√
Power Up State	On	On or Off	Select No for a 30 second delay on start up. If Yes is selected, there will be no delay on start up and the detector will always power up detecting.	×	✓
Disable Detector	N	Y or N	Disables detection, leaving the relay output permanently off with the dimming output operational. This mode is used when the unit is for maintained illuminance only.	×	✓
Inhibit	4 seconds	1 to 99 seconds	When the detector turns off, a delay is instigated to prevent retriggering. In certain circumstances this delay may not be enough. This parameter allows the delay to be changed.	×	✓
Factory default	-	-	Restores factory default settings	✓	✓

Switching functions							
Detection Mode	Presence	Presence or Absence	Presence mode allows the output to turn on when movement is detected and off when movement ceases. Absence mode allows the output to turn off when movement ceases, but must be manually turned on first.	✓	✓		
Lux on level (Switch level on)	9	1 to 9 For a higher resolution a scale of 101-199 is available	Sets a minimum light level below which the microwave sensor is enabled, allowing lights to be turned on by movement. Note: the Lux Level Off value must always be greater than the Lux Level On value.	√	√		
Lux off level (Switch level off)	9	1 to 9 For a higher resolution a scale of 101-199 is available	Sets a maximum light level above which the microwave sensor is disabled, preventing lights from being turned on by movement.	✓	√		

User Modes						
Override On	-	-	If the lights are off, sending the IR command will turn them on immediately and revert to automatic operation using the manual timeout period .	✓	✓	
Override Off	-	-	If the lights are on, sending the IR command will turn them off immediately. After the manual timeout period (described above), the sensor will revert to automatic.	✓	✓	
Cancel	-	-	Cancels the on or off override, returning the detector to normal operation.	×	✓	

Switch Input Mode	Switch Input Modes								
1 position switch together	Default	-	Short press on, long press off.	×	✓				
2 position switch together	-	-	Short press on, short press off.	×	√				

Technical data

Dimensions See diagrams opposite

0.15kg Weight

Supply Voltage 230VAC +/- 10%

Frequency 50Hz

Maximum Load 10A of lighting and/or ventilation

including incandescent, fluorescent, compact fluorescent, low voltage (by switching the primary of transformer).

On 1500mW, Off 910mW

Power consumption Terminal Capacity

Safety

2.5mm² -10°C to 50°C

Temperature 5 to 95% non-condensing Humidity

Flame retardant ABS and PC/ABS Material (casing)

Classifications Insulation Class II

Purpose Sensing control

Construction Independently mounted

control for flush

mounting.

Type of action Type 1.B action

(micro disconnection).

Pollution Degree 2 Class A Software

Rated impulse voltage, 4000V

The microwave radiation emitted by

these units is extremely low power and complies with ANSI standard

"IEEEC95.1-1999 Standard for Safety

Levels with Respect to Human Exposure to Radio Frequency


Electromagnetic Fields 3kHz 300GHz."

IP40 IP rating


EMC-2004/108/EC Compliance

LVD-2006/95/EC

0041579

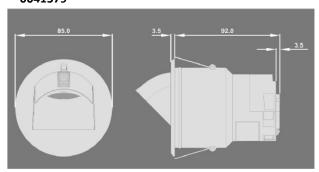

0041591

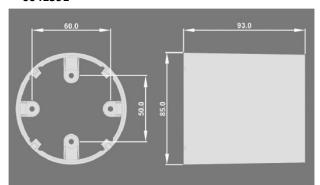

Frequency compatibility

The allowable frequency of operation of this product is different depending on region. Please select the correct order code using the table below.

CE

Zone	Region	Frequency
Blank (1)	UK, China, India, Middle East, Malaysia, Hong Kong, Singapore	10.687GHz
2	Australia and all of Europe <u>except</u> : UK, France, Portugal, Germany, Switzerland, Austria, Slovak Republic, Republic of Ireland	10.525GHz
3	France, Portugal, Switzerland	9.900GHz
4	Germany, Austria, Slovak Republic	9.350GHz
5	Republic of Ireland	10.41GHz